# Emerson

PD412014

### TECHNICAL SUPPORT 1.855.855.8926 technicalsupport@aloralighting.com

# **A** WARNINGS AND CAUTIONS

 $\cdot$  Make sure  $\ensuremath{\textbf{POWER}}$  is  $\ensuremath{\textbf{COMPLETELY OFF}}$  at the fuse box

 $\cdot$  Have your fixture installed by a qualified licensed electrician

- $\cdot$  Prepare everything in a clear area
- $\cdot$  Wear gloves at all times during this installation
- $\cdot$  Read instructions carefully before you start assembly

 $\cdot$  Keep this installation sheet for future reference

# NOTICE

- The important safeguards and instructions outlined in this sheet cannot cover all possible conditions and situations that may occur. It must be understood that caution and certain care factors must be followed. These instructions are provided for your safety and we highly recommend that a licensed, trained electrician install this unit.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box OR through a wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used, directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

# ASSEMBLY INSTRUCTIONS

#### Step 1

Remove fixture from its original package.

### Step 2

Separate mounting plate (1c) from canopy (2a) by removing canopy screws (2b).

#### Step 3

Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package.

# Step 4

Determine hanging height of fixture by securing rods (2d) to canopy (2a) and fixture body (3a) after feeding fixture wires through rods.

# Step 5

Make proper electrical connections (**black** to **hot** "L", **white** to **neutral** "N", **ground** to **"GND"**) with wire nuts (1b) provided in hardware package.

# Step 6

Attach canopy (2a) to mounting plate (1c) with canopy screws (2b).


# Step 7

Attach shade top (3b) to shade (3d), and align holes on shade (3d) with holes on fixture (3a), secure with panel thumb screws (3c).

# Step 8

Install the recommended lamp (4a) (not provided) (referred on the socket label for maximum wattage and type) to fixture socket.

You are now ready to enjoy your fixture.

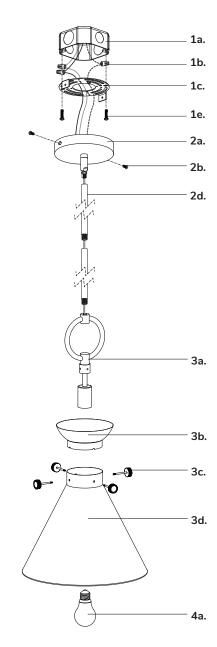



P. 1.855.855.8926
CANADA: 19054 28th Ave., - Surrey, BC V3Z 6M3
USA: 3035 E. Lone Mountain Rd. - Las Vegas, NV 89081
www.aloramood.com
20230109

Please Note:

· 120V input